




# Sony HDR-AS30V LCD Screen Replacement

This guide will replace the LCD screen that has been scratched, cracked, or has stopped working.

Written By: Dylan Keiter

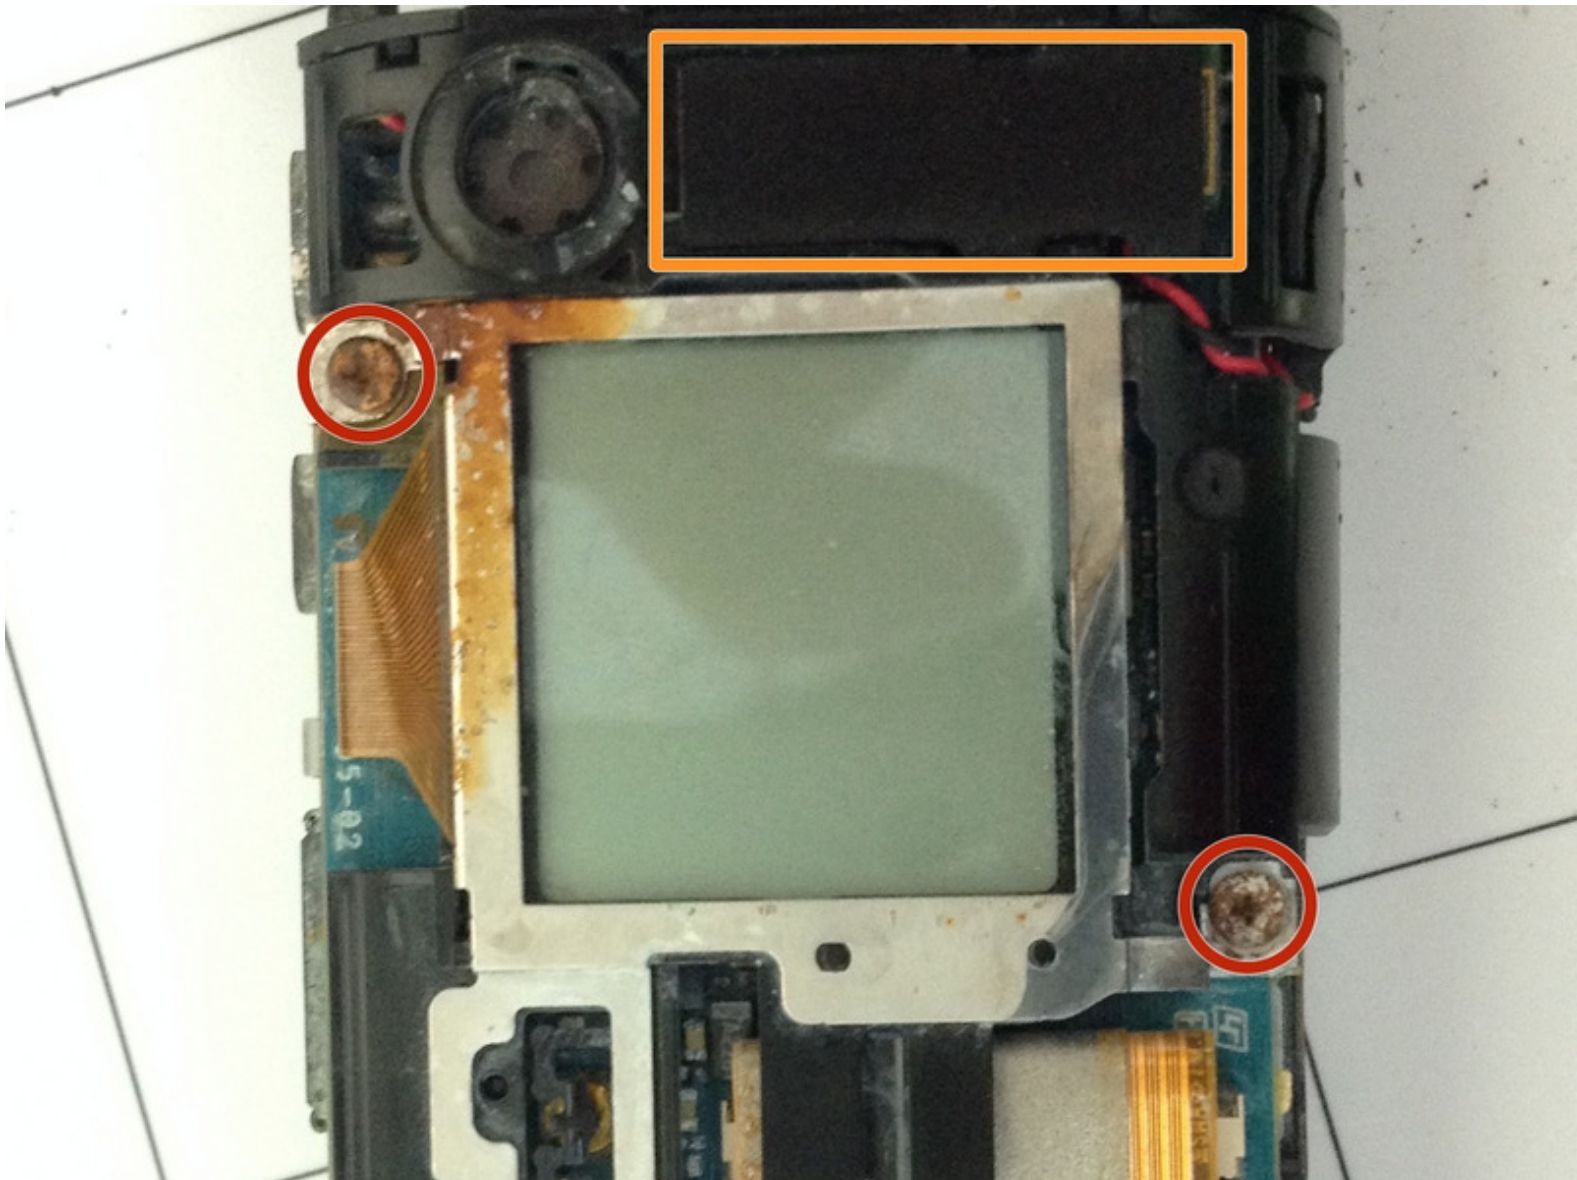

## INTRODUCTION

This is a comprehensive guide on how to fix and replace the LCD screen for Sony HDR-AS30V.

---



### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
  - [1.5 mm Flathead Screwdriver](#) (1)
-

## Step 1 — Outer Casing



- Open component door and remove two screws with PH000 bit or small Phillips screwdriver.
- Place aside the faceplate which the screws were holding down and component door.

## Step 2



- Open battery door by sliding sideways and flipping outward.



### Step 3



- Take your flat head screw driver and wedge under holder.

### Step 4




- With the screwdriver wedged, pull the casing away from the device.

## Step 5




- Slide out inner component.

## Step 6 — LCD Screen

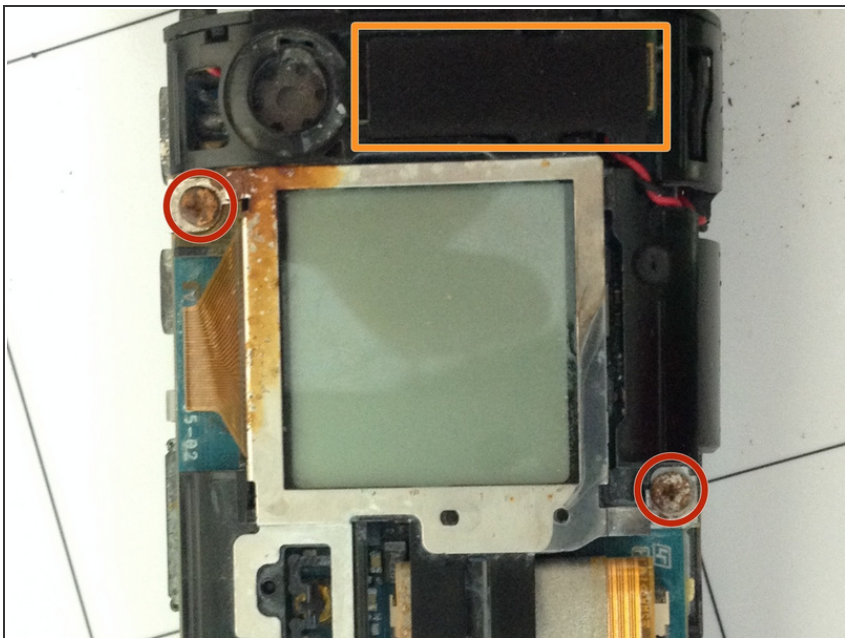


- Remove two screws with the PH000 screwdriver.
- Pop off plastic holder.

## Step 7

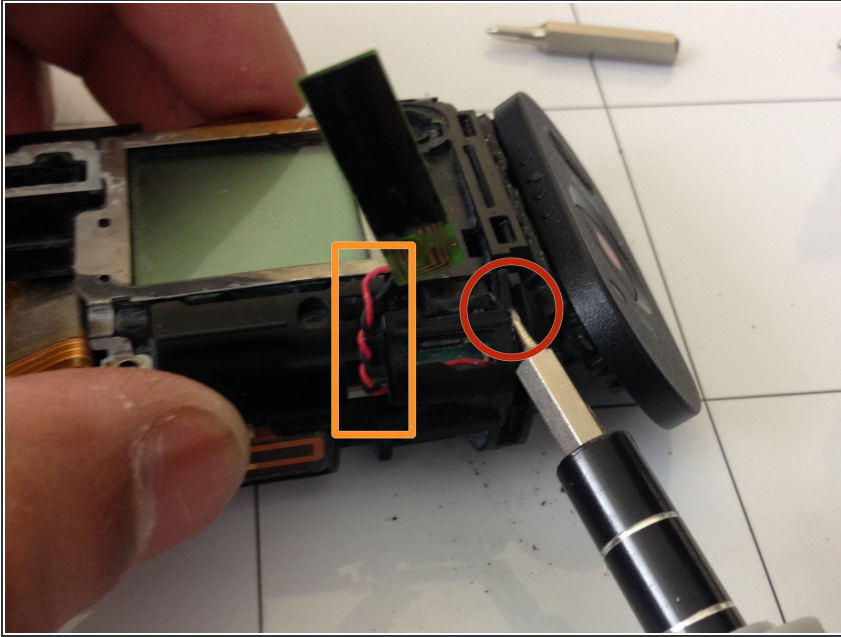

- With the flathead screwdriver, wedge under area shown and pop upwards.
- ⚠ Be sure to move the flex cable out of the way while flipping the plastic inner casing upward.

## Step 8

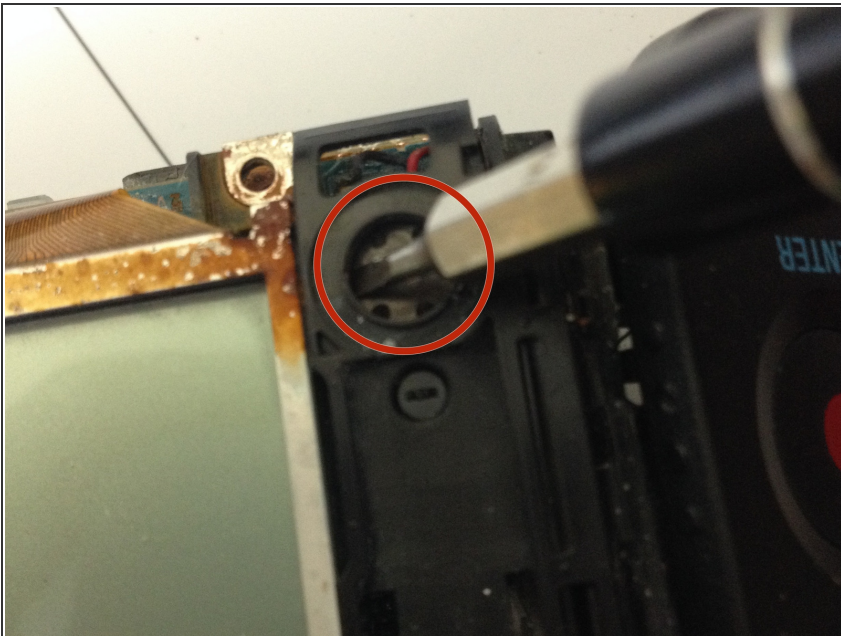

- Gently push speaker out of slot




## Step 9




- Flip open screen and make sure no cables are in the way.

## Step 10

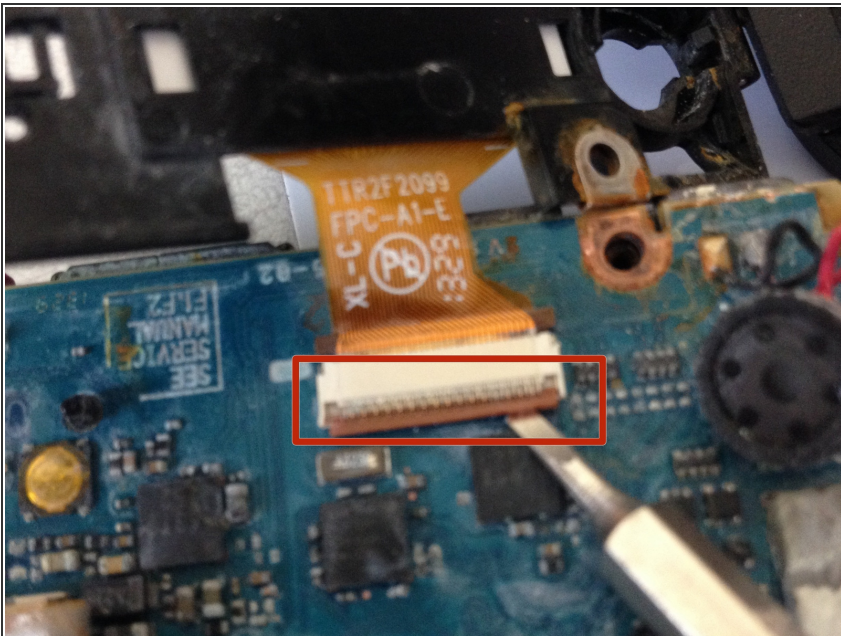

- With the flathead, lift up cable lock and pull the film out from underneath the lock.

## Step 11

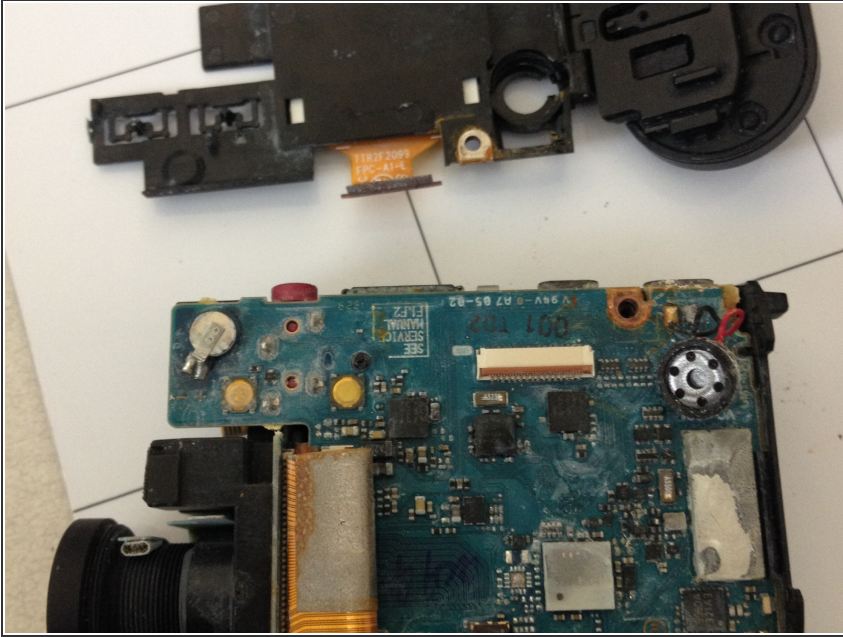

- Gently pull out screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-12-09 02:17:11 AM.